

# FDD040 SERIES

Duplex low pressure filters Sizes 040 to 400 according to DIN 24550

Inline filters for operating pressure up to 63 bar, flow rate up to 400 l/min.

Duplex construction for uninterrupted service. Change over valve on upstream side, ergonomic switch-over handle with safety lock and pressure compensation.



tested according to NFPA T3.10.5.1, ISO 10771, **HOUSING** 

ISO 3968

PRESSURE: max operating 63 bar sizes 040 to 100

max operating 32 bar sizes 160 to 400

CONNECTIONS: G 1"

G 1 1/2"

Head: aluminium alloy MATERIALS:

Bowl: aluminium alloy; painted

carbon steel for size FĎD040XD400 only

Seals: NBR

**BYPASS VALVE:** 3,5 bar

tested according to ISO 11170, 2941, 2942, 2943, 3724, **ELEMENT** 

3968,16889, 16908, 23181

glassfiber G01 - G03 - G06 - G10 -G15 FILTER MEDIA:

G25

20 bar **COLLAPSE** PRESSURE: 210 bar

**TEMPERATURE** 

**RANGE:** 

-30°C +100°C

**FLUID** Full with HH-HL-HM-HV


HETG-HEES (acc. to ISO 6743/4). **COMPATIBILITY:** 


For use with other fluid please contact Filtrec Customer Service

(info@filtrec.it).




# **OVERALL DIMENSIONS**

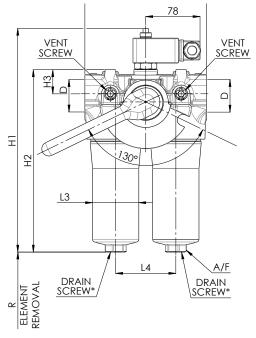

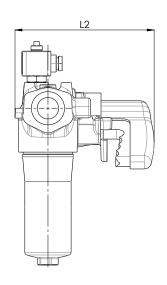


\* AVAILABLE FOR SIZE FDD040XD400 ONLY

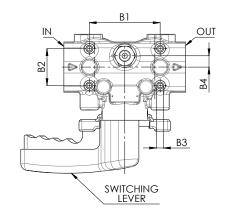

## **NOMINAL SIZE**

MODEL	B1	B2	В3	B4	D	L1	L2	L3	L4	H1	H2	НЗ	A/F	R	WEIGH
FDD040XD040										258	200				2,6 Kg
FDD040XD063	100	52	M8x15	16	G 1"	172	189	66	85	316	258	34	27	80	2,9 Kg
FDD040XD100										406	348				3,3 Kg
FDD040XD160										347	284				8,6 Kg
FDD040XD250	210	62	M10x20	19	G 1 1/2"	283	252	109	140	448	385	42	32	110	9,5 Kg
FDD040XD400										590	527				19,0 Kg

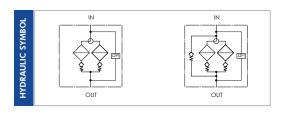



# **ORDERING INFORMATION**

	1	2	2	1	5	6	7.	Ω	0	10.	11.	10
	1.	۷.	٥.	4.	٥.	0.	/.	0.	7.	10.	11.	12.
	FDD040	XD	100	G10	Α	В	B5	D	S	000	S	0
SDADE E	ELEMENT				Δ	_		_			_	

1. FILTER SERIES	FDD040		
2. FILTER ELEMENT SERIES	XD		
3. FILTER SIZE	040-063-100		
4. FILTER MEDIA	000	no element	_
	G01	glassfiber $\beta_{4\mu m(c)} > 1.000$	_
	G03	glassfiber $\beta_{5\mu m(c)} > 1.000$	_
	G06	glassfiber $\beta_{7\mu m(c)} > 1.000$	_
	G10	glassfiber $\beta_{12\mu m(c)} > 1.000$	_
	G15	glassfiber $\beta_{17\mu m(c)} > 1.000$	_
	G25	glassfiber $\beta_{22\mu\mathrm{m(c)}} > 1.000$	_
5. ELEMENT COLLAPSE	А	21 bar	_
	В	210 bar	_
6. SEALS	В	NBR	
7. CONNECTIONS	B5	G 1"	for sizes 040-063-100
	В7	G 1 1/2"	for sizes 160-250-400
8. BYPASS VALVE	0	no by-pass	_
	D	3,5 bar	<del>-</del>
9. INDICATOR PORT OPTION	S	with metal plug	_
10. COMPULSORY FIELD	000	filtrec standard	
11. CORROSION PROTECTION	S	standard	
12. OPTION	0	no option	

## **ACCESSORIES**

The accessories must be ordered separately

INDICATOR	FG2	differential visual and electric 2,2 bar	-
For indicators detail see service instructions	FG5	differential visual and electric 5 bar	recommended for no bypass option
	FG8	differential visual and electric 8 bar	




## PRESSURE DROP (Ap) INFORMATION FOR FILTER SIZING


The total Delta P through a filter assembly is given from Housing  $\Delta p$  + Element  $\Delta p$ .

This ideally should not exceed 1,0 bar and should never exceed 1/3 of the set value of the by-pass valve. N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm<sup>3</sup>.

#### **HOUSING PRESSURE DROP**

The housing  $\Delta p$  is given by the curve of the considered model and port, in correspondence of the flow rate value.

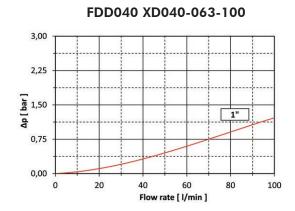

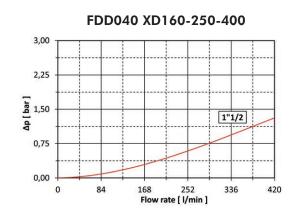

## **ELEMENT PRESSURE DROP** (filter elements 20 bar collapse)

The element  $\Delta p$  (bar) is given by the flow rate (I/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity Vx different than 32 cSt a corrective factor Vx/32 must be applied.

Example: 40 I/min with XD100G10A and oil viscosity 46 cSt:  $40 \times 3,6/1000 \times 46/32 = 0,21$  bar.

	G01A	G03A	G06A	G10A	G15A	G25A
XD040	22	15,4	13,5	7,88	6,75	5,63
XD063	16,15	11,31	9	5,54	4,85	4,15
XD100	12	8,4	5,85	3,6	3,15	2,7
XD160	7,81	5,47	4,47	2,63	1,84	1,49
XD250	5,2	3,64	2,61	1,68	0,91	0,86
XD400	3,25	2,28	1,52	1,12	0,64	0,57

#### EXAMPLE OF TOTAL Δp CALCULATION

FDD040XD100G10ABB5DS000S0 with 40 I/min and oil 46 cSt:

Housing  $\Delta p$  0,38 bar + element Dp 0,21 bar (40 x 3,6/1000 x 46/32) = total assembly  $\Delta p$  0,59 bar.



## **ELEMENT PRESSURE DROP** (filter elements 210 bar collapse)

The element  $\Delta p$  (bar) is given by the flow rate (l/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity Vx different than 32 cSt a corrective factor Vx/32 must be applied.

Example: 40 l/min with XD100G10B and oil viscosity 46 cSt:  $40 \times 6,75/1000 \times 46/32 = 0,39$  bar.

	G01B	G03B	G06B	G10B	G15B	G25B
XD040	34,97	24,48	22,5	14,63	12,38	10,13
XD063	29,23	20,46	16,62	10,38	8,65	6,92
XD100	19	13,3	10,35	6,75	5,85	4,95
XD160	8,13	5,69	4,74	3,37	2,81	2,25
XD250	5,4	3,78	3,06	2,52	2,16	1,8
XD400	3,38	2,36	1,94	1,57	1,29	1,01

## **EXAMPLE OF TOTAL Ap CALCULATION**

FDD040XD100G10ABB5DS000S0 with 40 I/min and oil 46 cSt:

Housing  $\Delta p$  0,38 bar + element Dp 0,39 bar (40 x 6,75/1000 x 46/32) = total assembly  $\Delta p$  0,77 bar.

N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density  $0.875 \text{ Kg/dm}^3$ .



#### **USER TIPS**



- FILTER HEAD
- 2 INDICATOR
- 3 FIXING HOLES
- 4 FILTER ELEMENT
- 5 SEAL KIT
- FILTER BOWL
- VENT

### INDICATOR TIGHTENING TORQUE

50 Nm

#### **SPARE SEAL KIT PART NUMBER (5)**

	NBR
XD040-063-100	06.021.00322
XD160-250-400	06.021.00324

#### **BOWL TIGHTENING TORQUE**

screw up filter bowl till end

## **WARNING**



Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.

#### **DISPOSAL OF FILTER ELEMENT**



The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.

#### **INSTALLATION**



- The IN and OUT ports must be connected to the hoses in the correct flow direction an arrow shows on the filter head (1).
- The filter housing should be preferably mounted with the bowl (6) downward.
- Secure to the frame the filter head (1) using the threaded fixing holes (3).
- Verify that no tension is present on the filter after mounting.
- 5. Enough space must be available for filter element replacement.
- The visual clogging indicator must be in a easily 6. viewable position.
- 7. When a electrical indicator is used, make sure
- that it is properly wired.
- 8 Never run the system with no filter element fitted.



10. Filter housing should be earthed.

#### **OPERATION**



- The filter must work within the operating conditions of pressure, temperature and compatibility given in the first page of this data sheet.
- The filter element must be replaced as soon as the clogging indicator signals at working temperature (in cold start conditions, oil temperature lower than 30°C, a false alarm can be given due to oil viscosity).
- If no clogging indicator is mounted, replace the element according to the system manufacturer's recommendations.

# **MAINTENANCE**



- Operate and hold pressure equalizing lever located behind switching lever. Pull catch knob and swivel switching lever. Engage the catch on the clear filter side. Place through or drip pan underneath to collect leaving oil.
- Loosen vent screw of the filter side not in use by 2-3 turns; max. until contact is made with the safety stop.
- Unscrew filter bowl by rotating same counter-clockwise and clean with a suitable medium.
  - Warning: The shift lever may not, from now until the screwing back in of the filter bowl, be activated under any circumstances!
- Remove filter element with a side-to-side motion.
- Check O-ring on the filter bowl for damage and replace, if necessary.



- Make sure that the order number on the spare element corresponds to the oder number of the filter name-plate.
- Lightly lubricate the threads of the filter bowl and screw into the filter head.
- To refill the filter chamber, operate only the pressure equalizing lever (leave the switching lever arrested in its catch) long enough for the medium to emerge bubble-free from the vent bore.
- Tighten vent screw and check filter for leaks by operating the pressure equalizing lever once again.

