



# F100 SERIES

In line high pressure filters elements according to DIN 24550

Inline filters for operating pressure up to 100 bar, flow rate up to 400 l/min.

Available with or without bypass, indicator port is a standard option to fit a visual or electrical differential indicator.


# **TECHNICAL INFORMATION**


HOUSING	tested according to NFPA T3.10.5.1 , ISO3968					
HYDRAULIC SYMBOL:	A B	A				
PRESSURE:	Max operating:	F100 XD040-063-100 F100 XD160-250-400	100 bar 80 bar			
	Burst:	F100 XD040-063-100 F100 XD160-250-400	300 bar 200 bar			
CONNECTION PORTS:	G 1/2"÷1 1/2	ıı				
MATERIALS:	Head: Bowl: Seal:	aluminium alloy aluminium alloy NBR (FKM on request)				
BYPASS:	No by-pass or	6 bar setting				


ELEMENT	type DIN 24550, tested according to ISO 2941, 2942, 2943, 3968, 16889, 23181				
FILTER MEDIA:	Inorganic microfiber: Paper:	G03 - G06 - G10 - G15 - G25 C10			
DIFFERENTIAL COLLAPSE PRESSURE:	21 bar or 210 bar				
OPERATING TEMPERATURE RANGE:	-25°C +100°C				
FLUID COMPATIBILITY:	Full with HH-HL-HM-HV (acc. To ISO 2943). For use with other fluid please contact Filtrec Customer Service (info@filtrec.it).				




# **OVERALL DIMENSIONS**

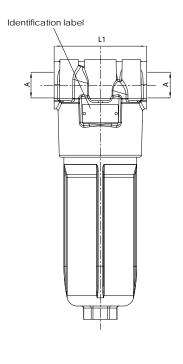

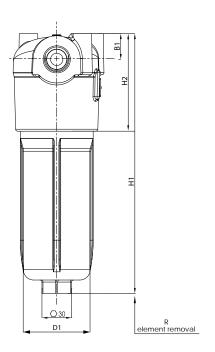

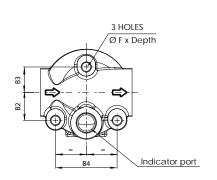

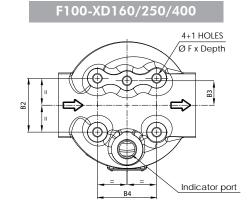

## **NOMINAL SIZE**

MODEL	Α	В1	B2	В3	B4	D1	F	H1	H2	L1	R	WEIGHT						
F100-XD040	G 1/2"						183				1,45 Kg							
F100-XD063	G 3/4"	25	27,5			65		253	95	90	110	1,55 Kg						
F100-XD100	G 1"			25	25	25	25	25	25	25	60,6		M10x15	332				1,8 Kg
F100-XD160	C 1 1/4"			23	00,0		MIOXIS	289				3,7 Kg						
F100-XD250	G 1 1/4" G 1 1/2"	40	55	55	55	55	55	55			110		361	129	140	130	4,4 Kg	
F100-XD400	0 1 1/2							514				5,6 Kg						



# **ORDERING INFORMATION**

	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.
	F100	XD	100	G10	Α	В	В3	D	W	E05
SPARE	ELEMENT	XD	100	G10	Α					
1. FILT	ER SERIES			F100						
2. FILT	ER ELEMEN	T SERIES		XD						
3. FILT	ER SIZE			040-063-1	00					
				160-250-4						
1 EIIT	ER MEDIA					1 .			_	
+, FILI	EK MEDIA			000		element	> 1.00	<u> </u>		
				G03 G06			$\frac{m(c)}{n(c)} > 1.000$		_	
				G10			$t_{m(c)} > 1.000$			
				G15	alas	sfiber B	$t_{m(c)} > 1.00$ $t_{m(c)} > 1.00$	0		
				G25			$t_{m(c)} > 1.00$ $t_{m(c)} > 1.00$		_	
				C10		er β <sub>10μm(c)</sub>			— only for D	p 21 bar
				010			<u>-</u>			<u>'</u>
5. ELE/	MENT COLI	LPASE		A	21					
				В	210	) bar			recommer	ided with no by-pas
6. SEA	LS			В	NBF	?				
				V	FKΛ	1				
7. COI	NNECTION	IS		В3	G 1	/2"				
	rent thread op			B4		G 3/4"				)40-063-100
ıvailabil	ity with Filtrec	Customer S	ervice.	B5	G 1					
				B6	G 1	1/4"			for sizes 1	60-250-400
				B7	G 1	1/2"			— for sizes i	00-230-400
B. BYP	ASS VALVE			0	no	oy-pass				
J. <b>D</b> 117	100 171212			0	6 b				_	
		DT 0 DT	211						_	
9. IND	ICATOR PO	ORI OPIIC	JN	S		metal plu	_			
				W	with	plastic pl	ug		when usir	g an indicator
10. INI	DICATOR			000	no i	ndicator				
				V05	diffe	erential vis	ual 5 bar		_	
				E05	diffe	erential ele	ectrical 5 b	ar		
				V08	diffe	erential vis	ual 8 bar		— no hungar	s version only
				E08	diffe	erential ele	ctrical 8 bc	ır		version offly
									_	
ACCES	SSORIES			LC24	LED	connecto	r		_	

The accessories must be ordered separately




# PRESSURE DROP (Ap) INFORMATION FOR FILTER SIZING


The total Delta P through a filter assembly is given from Housing  $\Delta p$  + Element  $\Delta p$ .

This ideally should not exceed 1,0 bar and should never exceed 1/3 of the set value of the by-pass valve. N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm<sup>3</sup>.

### **HOUSING PRESSURE DROP**

The housing  $\Delta p$  is given by the curve of the considered model and port, in correspondence of the flow rate value.

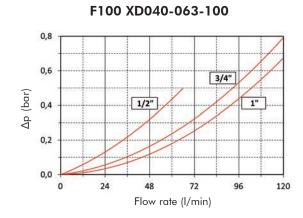

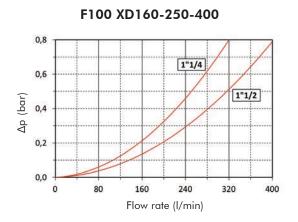

## **ELEMENT PRESSURE DROP** (filter elements 21 bar collapse)

The element  $\Delta p$  (bar) is given by the flow rate (I/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity Vx different than 32 cSt a corrective factor Vx/32 must be applied.

Example: 80 I/min with XD063G25A and oil viscosity 46 cSt  $> 80 \times 4,62/1000 \times 46/32 = 0,53$  bar

	G03A	G06A	G10A	G15A	G25A	C10A
XD040	22,00	15,00	8,75	7,50	6,25	5,00
XD063	16,15	10,00	6,15	5,38	4,62	3,85
XD100	12,00	6,50	4,00	3,50	3,00	2,00
XD160	7,81	4,96	2,92	2,04	1,66	0,94
XD250	5,20	2,90	1,86	1,01	0,96	0,58
XD400	3,25	1,69	1,24	0,71	0,64	0,36

### **EXAMPLE OF TOTAL Ap CALCULATION**

F100XD063G25ABB5DWV05 with 80 I/min and oil 46 cSt:

Housing  $\Delta p$  0,3 bar + element Dp 0,53 bar (80 x 4,62/1000 x 46/32) = total assembly  $\Delta p$  0,83 bar



# **ELEMENT PRESSURE DROP** (filter elements 210 bar collapse)

The element  $\Delta p$  (bar) is given by the flow rate (I/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity Vx different than 32 cSt a corrective factor Vx/32 must be applied.

Example: 80 l/min with XD100G25B and oil viscosity 46 cSt  $> 80 \times 5,5/1000 \times 46/32 = 0,63$  bar

	G03B	G06B	G10B	G15B	G25B
XD040	34,97	25,00	16,25	13,75	11,25
XD063	29,23	18,46	11,54	9,62	7,69
XD100	19,00	11,50	7,50	6,50	5,50
XD160	8,13	5,00	3,75	3,13	2,50
XD250	5,40	3,40	2,80	2,40	2,00
XD400	3,38	2,16	1,75	1,44	1,13


## **EXAMPLE OF TOTAL Ap CALCULATION**


F100XD100G25BBB5DWV08 with 80 I/min and oil 46 cSt:

Housing  $\Delta p$  0,3 bar + element Dp 0,63 bar (80 x 5,5/1000 x 46/32) = total assembly  $\Delta p$  0,93 bar

### **BYPASS VALVE PRESSURE DROP**

The bypass valve  $\Delta p$  is given by the curve of the considered model and setting, in correspondence of the flow rate value.

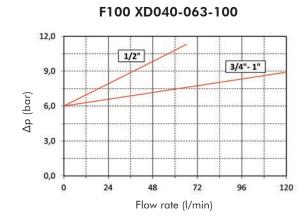

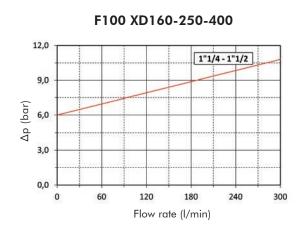

N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm<sup>3</sup>.



### **USER TIPS**



- 1 FILTER HEAD
- 2 INDICATOR PORT
- 3 FIXING HOLES
- 4 BY- PASS VALVE
- 5 FILTER ELEMENT
- 6 FILTER BOWL
- SEAL KIT
- IDENTIFICATION LABEL

#### INDICATOR TIGHTENING TORQUE

V05/E05/V08/E08	50 Nm

#### **SPARE SEAL KIT PART NUMBER**

	NBR	FKM
F100 XD040-063-100	06.021.00090	06.021.00135
F100 XD160-250-400	06.021.00096	06.021.00114

### **WARNING**



Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.

### **DISPOSAL OF FILTER ELEMENT**



The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.

#### **INSTALLATION**



- 1. the IN and OUT ports must be connected to the hoses in the correct flow direction (an arrow shows on the filter head (1)
  - the filter housing should be preferably mounted with the bowl (6) downward
  - secure to the frame the filter head (1) using the threaded fixing holes (3)
  - 4. verify that no tension is present on the filter after mounting
  - 5. enough space must be available for filter element replacement
  - the visual clogging indicator must be in a easily viewable position
  - 7. when a electrical indicator is used, make sure that it is properly wired



- never run the system with no filter element fitted
- keep in stock a spare FILTREC filter element for timely replacement when required

#### **OPERATION**



- 1. the filter must work within the operating conditions of pressure, temperature and compatibility given in the first page of this data
  - the filter element must be replaced as soon as the clogging indicator signals at working temperature (in cold start conditions, oil temperature lower than 30°C, a false alarm can be given due to oil viscosity)
  - If no clogging indicator is mounted, replace the element according to the system manufacturer's recommendations

#### **MAINTENANCE**



- make sure that the system is switched off and there is no residual pressure in the filter
- unscrew the bowl (6) by turning it anti-clockwise and remove it
- remove the dirty element (5)
- 4. fit a new FILTREC element (5), verifying the part number, particularly concerning the micron rating; open its plastic protection on the open end side and insert it onto the spigot in the filter head, then remove completely the plastic protection
- 5. clean carefully the bowl; check the O-rings (7) conditions and replace if necessary
- lubricate the bowl's thread (6) and screw it by hand in the filter head (1) by turning it
- screw in the bowl to stop



↑ 8. the used filter elements cannot be cleaned and re-used



